

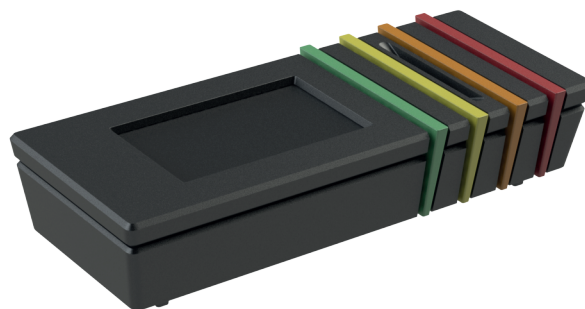
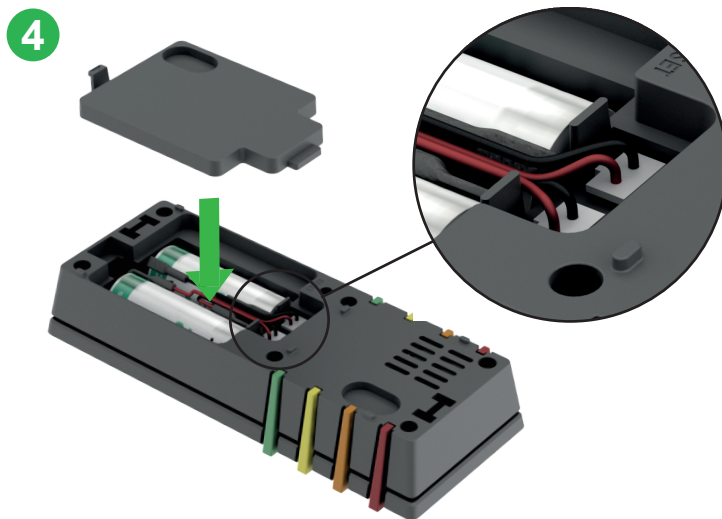
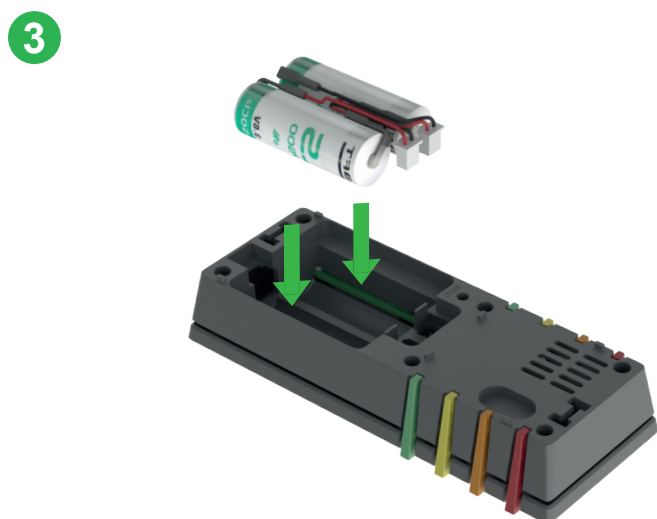


Installation manual Senseair Aercast



Battery powered
CO₂, temperature and relative humidity sensor

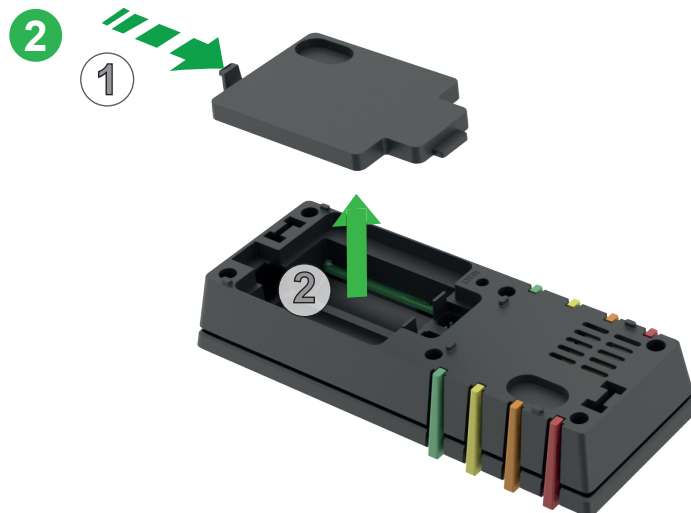

Senseair
An Asahi Kasei Group Company

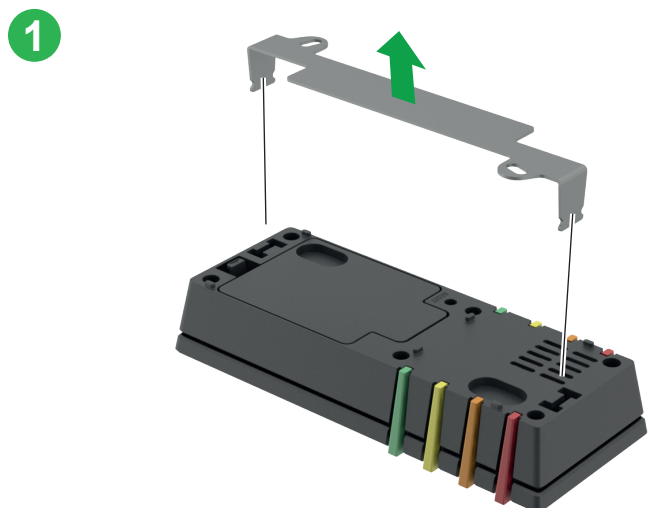

5

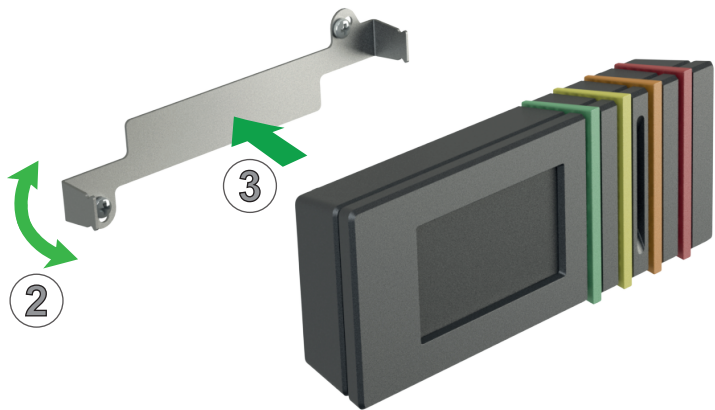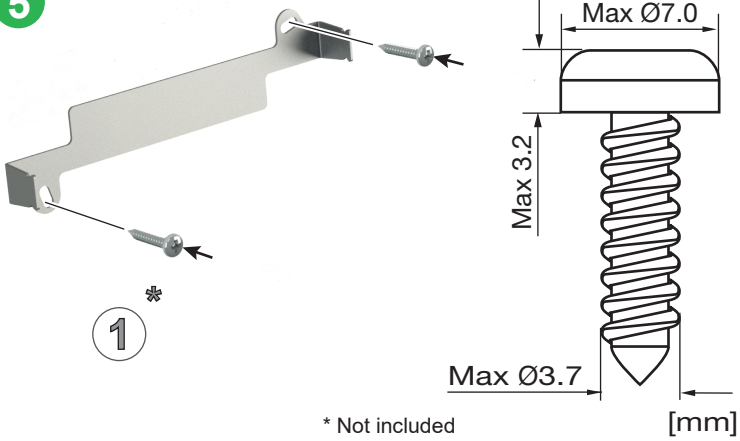

Senseair AB (headquarter)
 Stationsgatan 12, 824 71 Delsbo, Sweden
 Phone: +46-(0)653 – 71 77 70
www.senseair.com