



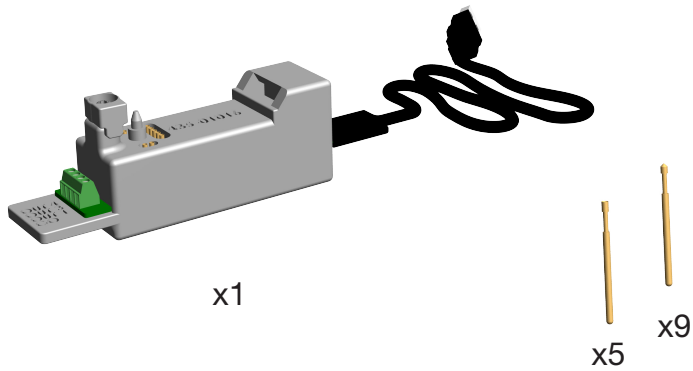

NOTE:
ESD-sensitive product.
Use ESD protection equipment.

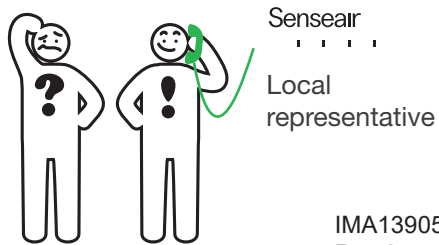


IMA13905
Rev 2

Installation manual


SADK S8-4B

Senseair Development Kit S8-4B

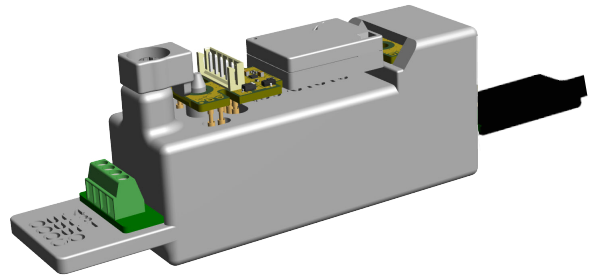


Senseair

1

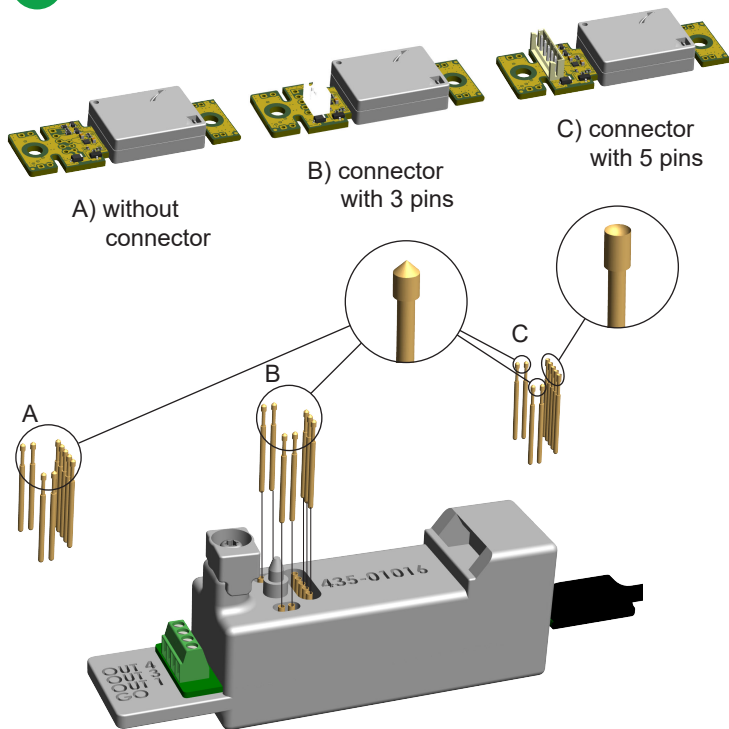

2

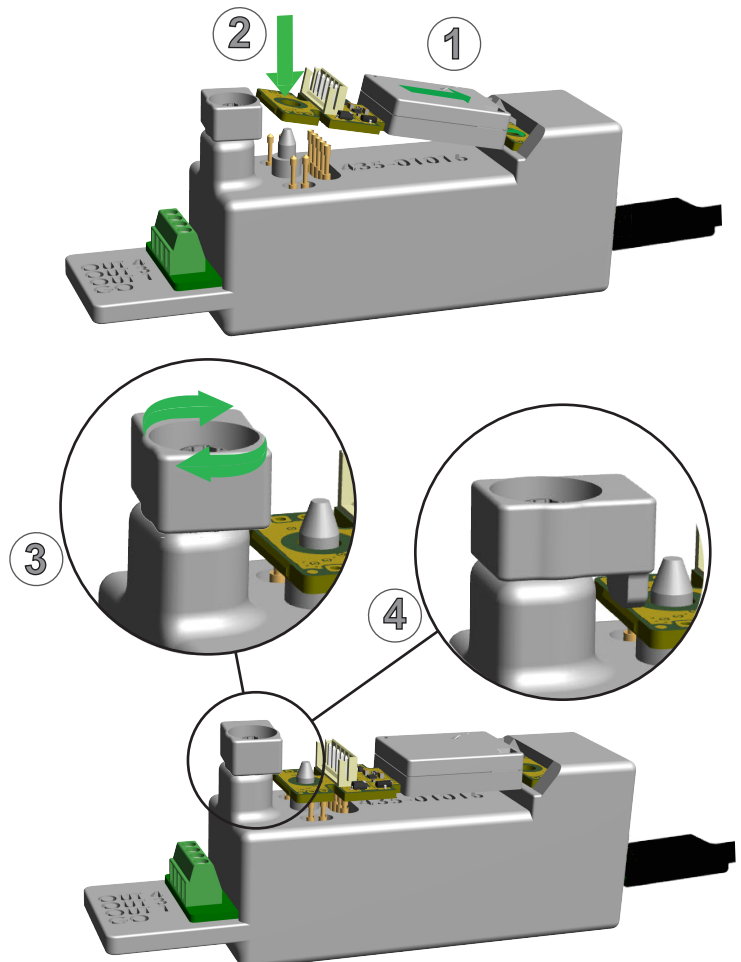

UIP software (version 5 or higher)
and
USB Cable Driver

are downloadable at
<https://senseair.com/product/evaluation-kit-sadk/>



Senseair AB (headquarter)
Stationsgatan 12, Box 96, 824 08 Delsbo, Sweden
Phone: +46-(0)653 – 71 77 70
www.senseair.com

©2024 Senseair AB. All rights reserved.