

Installation manual

Senseair Workplace

Alcohol screening




Senseair

1

Wall

Recommended mounting
distance from floor to upper
screw: 1400-1500 mm

Recommended clearance of
min. 200 mm above the device.

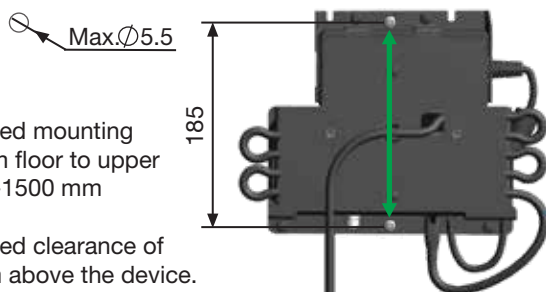

[mm]

Pos. 1



x2

*Not included

Alternative
mounting positions

Pos. 2

Pos. 3

Pos. 4

Table


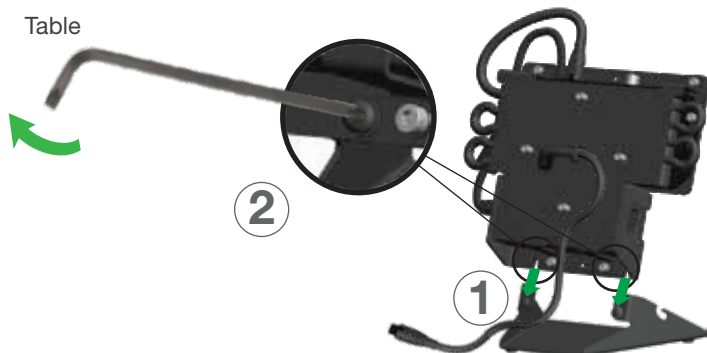


Table stand: part No.: 426-00211

2

1

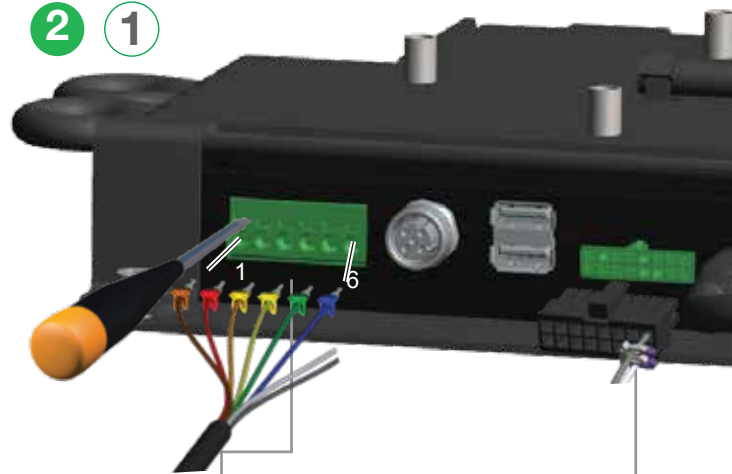

Pin	Name	Feature
1	Relay 1	Closed at negative test
2		
3	Relay 2	Closed at negative test
4		
5	Relay 3	Closed at positive test
6		


Pin	Name	Spec.	Feature
1	Input	5-12 VDC	Start test
2-8			Not used
9	GND	0 VDC	
10-16			Not used

Signal cable: part No.: 840-00028 Max 2 A, 24 V

2 2



Ethernet cable: part No.: 115-00029

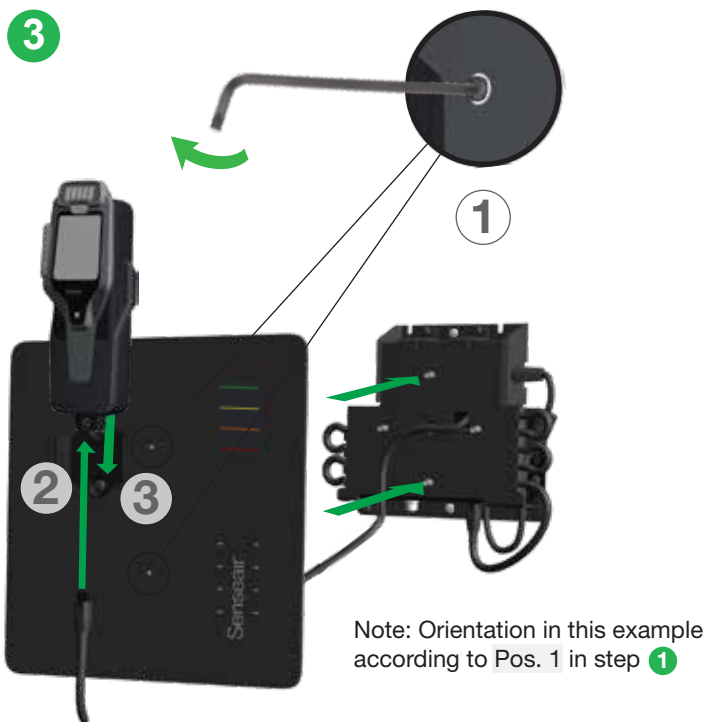

4 Connect to power source



Grounded outlet power source



Keep transmitting electronic devices, e.g. mobile phones away from the system, in order to minimise interference.



Visit senseair.com or use the QR code above for more product documentation.



Senseair AB (headquarter)
Stationsgatan 12, Box 96, 824 08 Delsbo, Sweden
Phone: +46-(0)653 – 71 77 70
www.senseair.com

©2025 Senseair AB. All rights reserved.