

 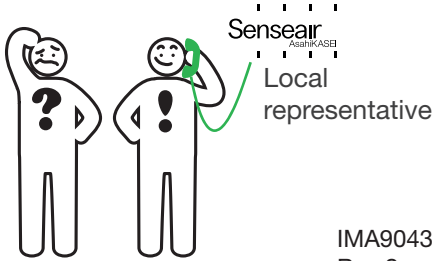


Installation manual
Senseair ExploraPM_{2.5}
LoRaWAN
PM, temperature and relative humidity sensor

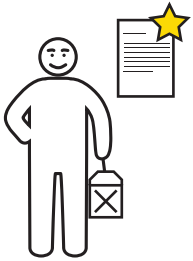


IMA9043
Rev 2




Senseair
AsahiKASEI


1

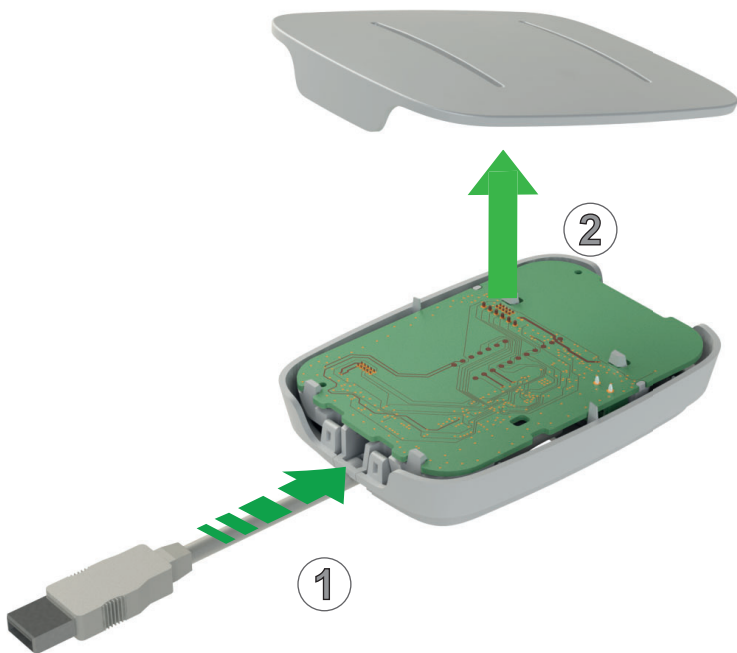



2

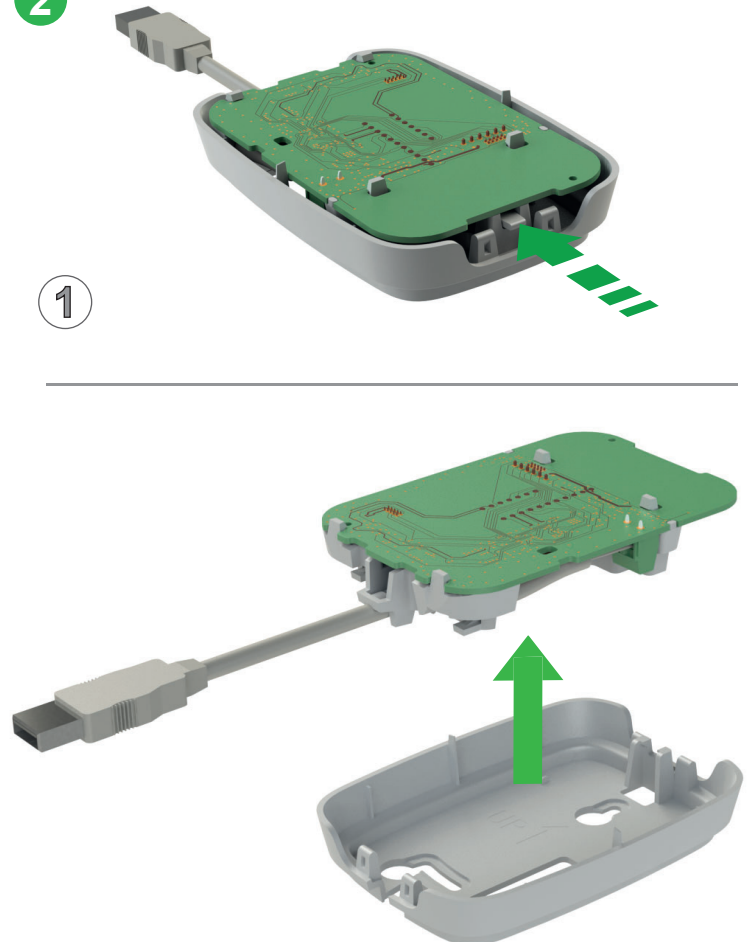

2

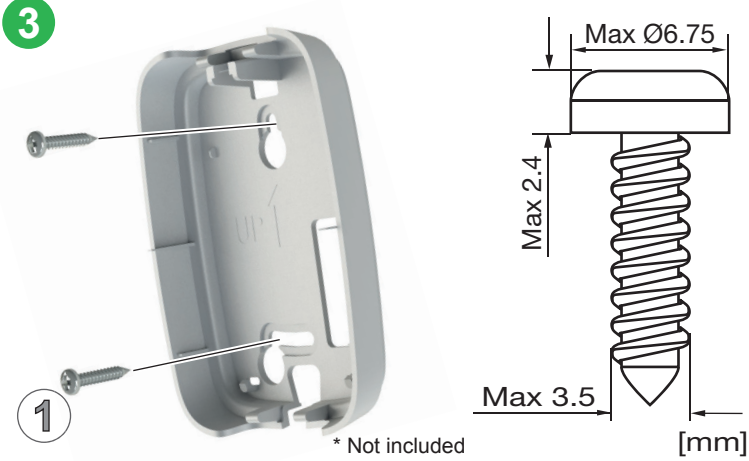

! NOTE:
Use manual screwdriver to avoid damages on plastic cover.

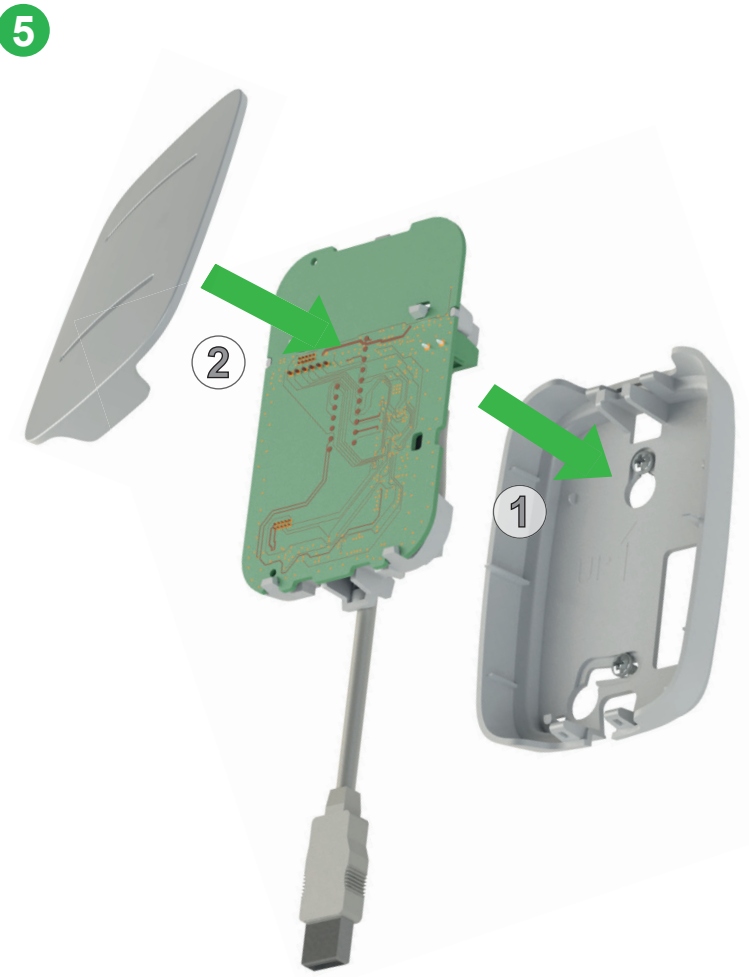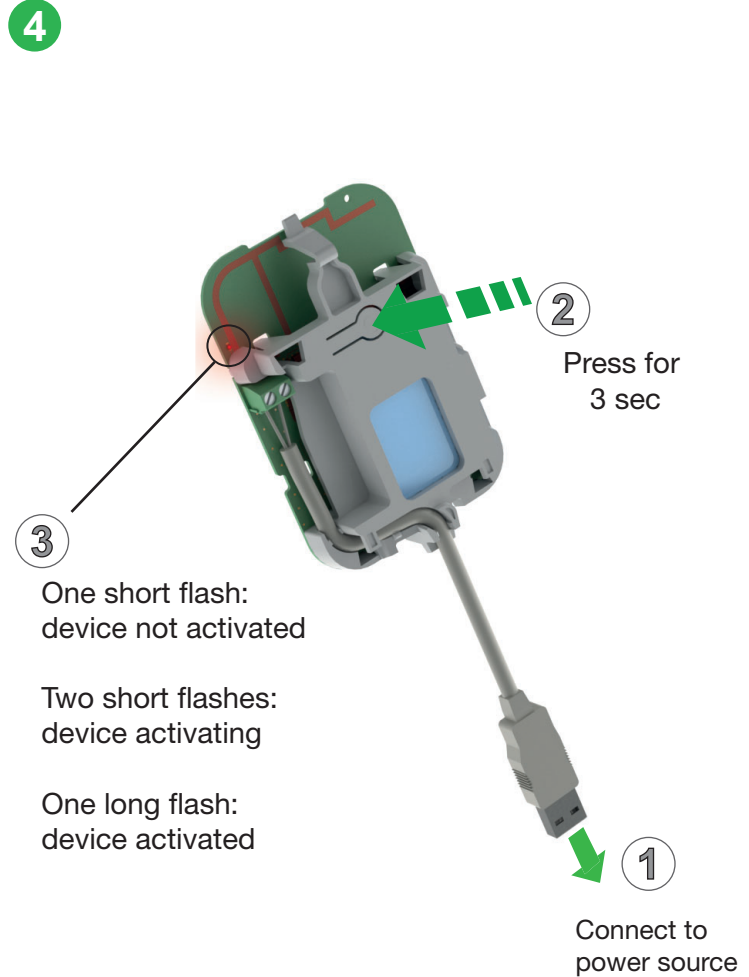

Senseair AB (headquarter)
 Stationsgatan 12, Box 96, 824 08 Delsbo, Sweden
 Phone: +46-(0)653 – 71 77 70
 www.senseair.com