

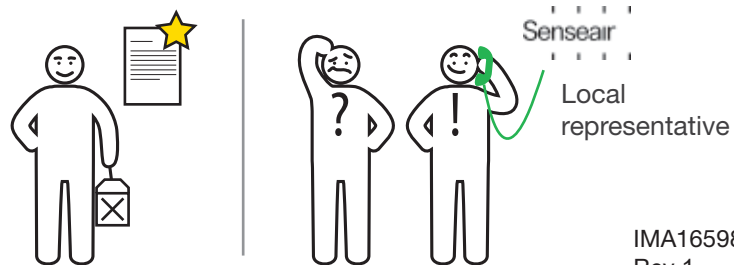




Installation Manual
Senseair S9 2%
CO₂ sensor in a housing

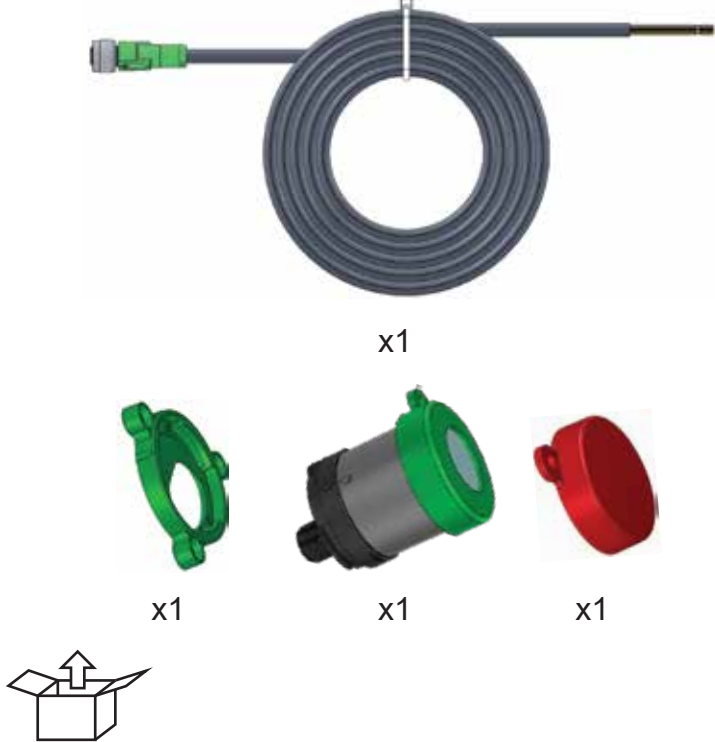


IMA16598
Rev 1

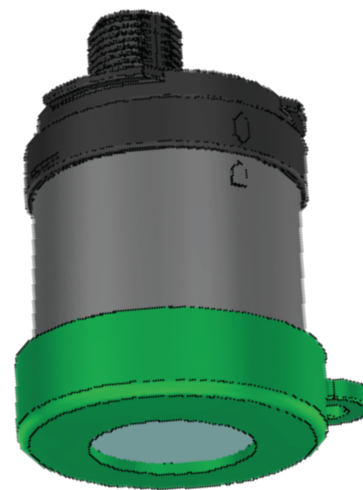

Senseair

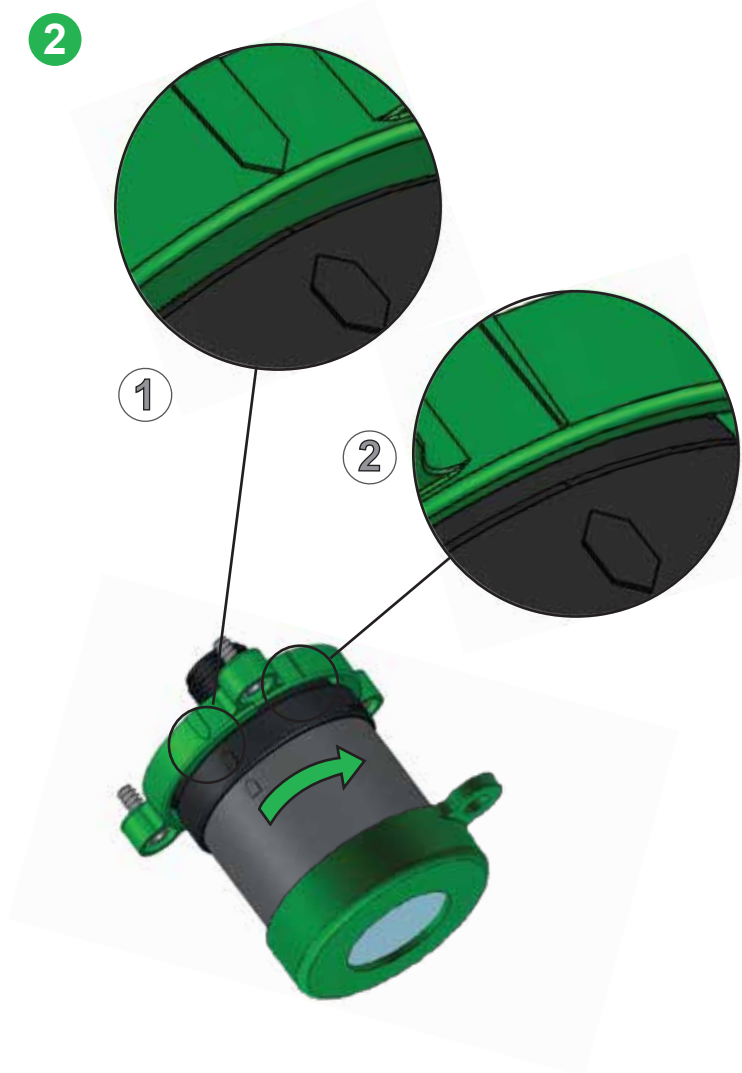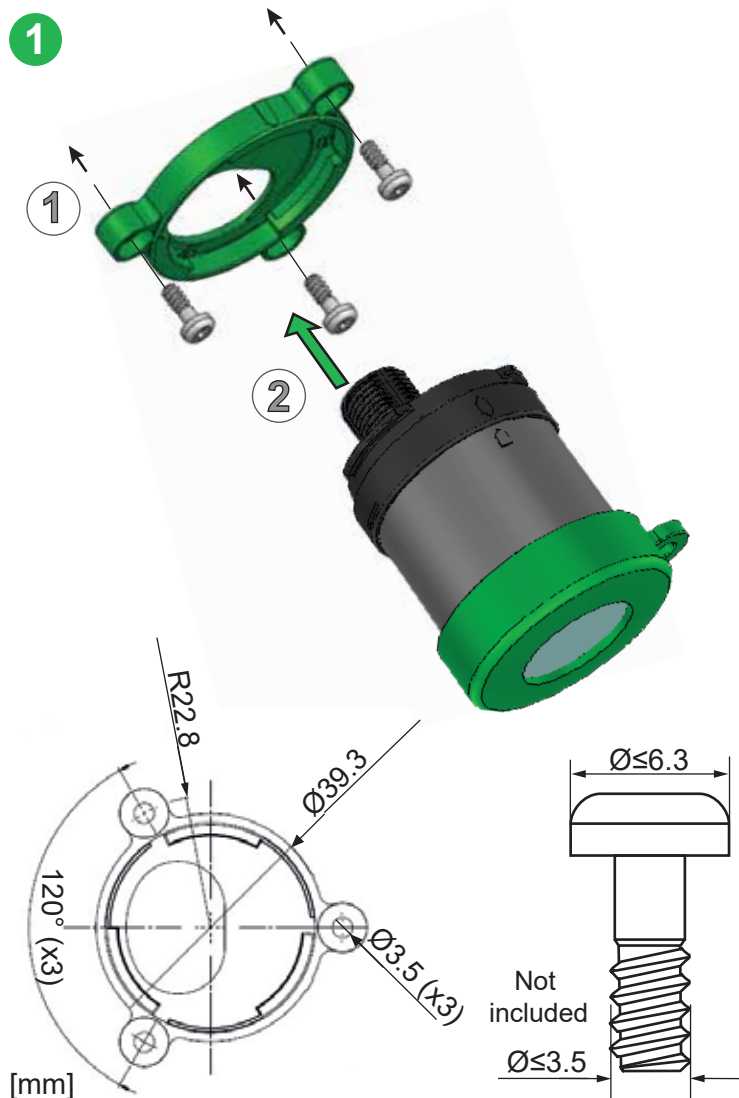


3

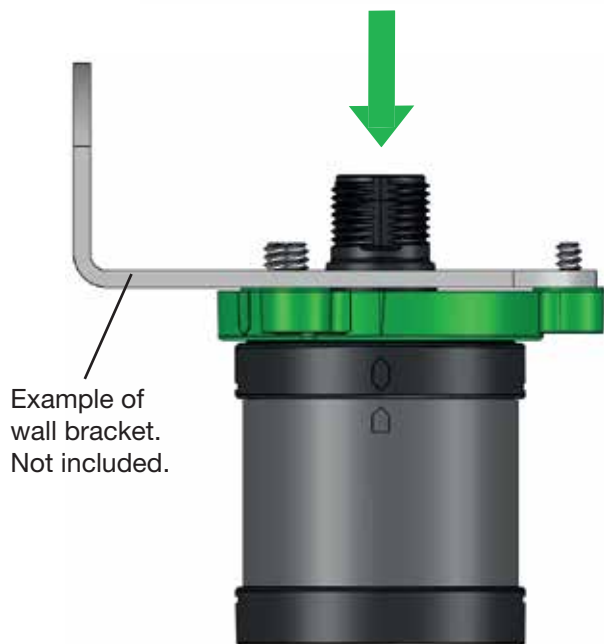



4



5

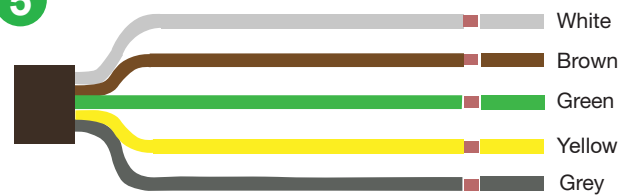

Cable colour	Signal	Description
White	Ground	GND
Brown	Power	15–30 VDC
Green	Not used	N/A
Yellow	VOUT	0–5 V, CO ₂ 0–20 000 ppm
Grey	zCAL	Ground input >15 s -> Zero calibration

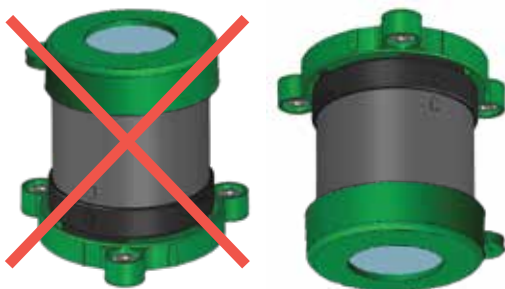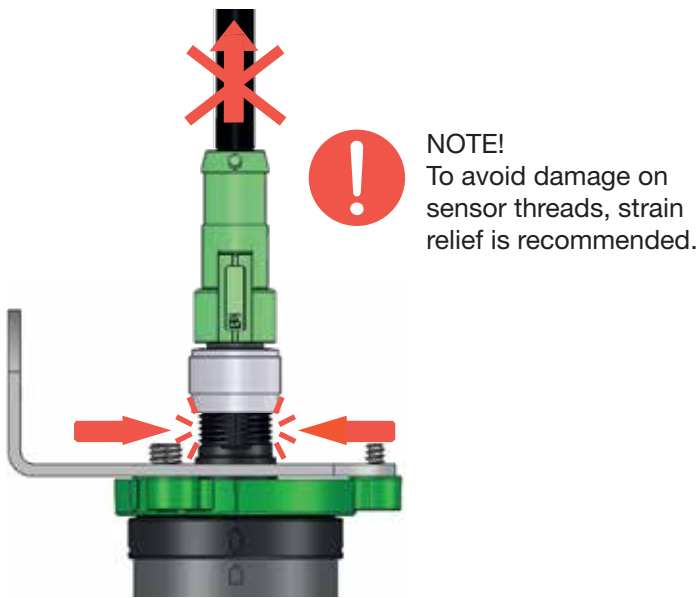

NOTE!
To minimise moisture/dust accumulation, mount sensor vertical with filter downwards.



NOTE!
Use protective cover during cleaning procedure.



NOTE!
Use calibration cover during zero calibration procedure.

NOTE!
Calibration cover not included.
Can be ordered separately.

Senseair AB (headquarter)
Stationsgatan 12, Box 96, 824 08 Delsbo, Sweden
Phone: +46-(0)653 – 71 77 70
www.senseair.com