

# Product Specification

## eSENSE


Carbon dioxide sensor in a housing



### General

eSENSE is a simple, low cost, state-of-the-art, maintenance-free carbon dioxide transmitter for installation in the climate zone or in the ventilation duct.

eSENSE measures the carbon dioxide concentration in the ambient air, using infrared technology, up to 2000ppm, and transforms the data into an analogue output.

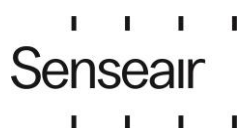

Item	eSENSE
Target gas	Carbon dioxide (CO <sub>2</sub> )
Operating principle	Non-dispersive infrared (NDIR)
Measurement range	0 – 2000 ppm <sub>vol</sub> <sup>1</sup>
OUT1	0 – 10 V for 0 – 2000 ppm ±2% of reading ±20 mV
OUT2	2 – 10 V (or 4 – 20 mA) for 0 – 2000 ppm ±2% of reading ±20 mV
Accuracy	±30ppm ±3% of reading <sup>1, 2</sup>
Response time (T1/e)	<10 sec. @ 30 cc/min. flow rate, <3 min. diffusion time
Rate of measurement	0.5 Hz
Operating environment	Residential, commercial and industrial spaces <sup>3</sup>
Operating temperature	0 – 50 °C
Operating humidity	0 – 95% RH non condensing
Storage temperature	-40 – 70 °C (display model (Disp): -20 – 50 °C) <sup>3</sup>
Dimensions (mm)	See housing options below
Power supply	24 V AC/V DC ±20%, 50 Hz (half-wave rectifier input)
Warm-up time to spec. precision	1 min (@ full specs <15 min)
Life expectancy	>15 years <sup>4</sup>
Serial communication	UART
OUT 1	Linear conversion range: 0 – 10 V for 0 – 2000 ppm <sup>1</sup> Electrical characteristics: R <sub>OUT</sub> <100 Ohm R <sub>LOAD</sub> >5 kOhm D/A conversion accuracy: ±2% of reading ±20 mV D/A resolution: 10 mV (10 bit)
OUT 2	Linear conversion range: 2 – 10 V (or 4 – 20 mA) for 0 – 2000 ppm <sup>1</sup> Electrical characteristics: R <sub>OUT</sub> < 100 Ohm R <sub>LOAD</sub> >5 kOhm D/A conversion accuracy: ±2% of reading ±0.3 mA D/A Resolution: 0.02 mA (10 bit)
Thermistor outputs	Temperature measurement resistor terminal output with signal return connected to ground terminal (option TR) <sup>5</sup>
Maintenance	Maintenance-free with using Senseair ABC logic Self calibration using for normal indoor applications <sup>4, 6</sup>

Table 1: Key technical specification for the eSENSE

Note 1: Extended range up to 10000 ppm ±10%

Note 2: Accuracy is defined after zero calibration or after minimum three (3) ABC periods of continuous operation.

Note 3: All corrosive environments are excluded.

Note 4: In normal Indoor Air Quality (IAQ) applications @ NTP (25 °C, 101.3 kPa).

Note 5: Resistive probe is to be mounted by the user. Can be factory pre-mounted upon request.

Note 6: Requires fresh air (400 ppm) once every ABC period.

## Terminal descriptions

The table below specifies what terminals and I/O options are available in the general *K50 sensor platform*. Please note, that in the eSENSE default configuration, only G+, G0, OUT1 and OUT2 have any pre-programmed functions.

Functional group	Descriptions and ratings
Power supply	
G+	<p>Power supply voltage may be AC or DC. Positive pole of DC power supply shall be connected to G+. Sensor performs half wave rectification of supplied AC voltage. Power supply lines are protected by varistor from voltage spikes and over voltage. Serial 3R3 resistor limits start up inrush current.</p> <p>Nominal specification:</p> <p style="padding-left: 40px;">24 V AC <math>\pm 20\%</math></p> <p style="padding-left: 40px;">24 V DC <math>\pm 20\%</math></p> <p>Absolute maximum ratings 16.5 – 40 V DC</p>
G0	<p>Connected to sensor's ground.</p> <p>Negative pole connection for DC power supply</p>

## Serial Communication

<p><b>UART (TxD, RxD)</b></p>	<p>Optional, available on from JP2  5 V CMOS logical levels, ModBus communication protocol.  Logical levels corresponds 5 V powered logics.</p> <p>Protection 56R resistors are added on RxD and TxD lines  RxD line is configured as digital input.      Input high level is 2.1 V min     Input low level is 0.8 V max  TxD line is configured as digital output.      Output high level is 4.0 V     Output low level is 0.75 V max</p> <p>RxD input is pulled up to DVCC = 5 V by 56 kOhm  TxD output is pulled up to DVCC = 5 V by 56 kOhm</p>
-------------------------------	---

## Outputs

OUT1	Buffered linear output 0 to 10 V or 2 to 10 V, or any other voltage span within 0 to 10 V range, depending on sensor configuration. Resolution 10 mV.
OUT2	Buffered linear output 0 – 10 V or 2 – 10 V alternatively 0 – 20 mA or 4 to 20 mA, or any other voltage/current span within 0 – 10 V/0 – 20 mA range, depending on sensor configuration. Resolution 10 mV/0.02 mA  Choice of voltage/current output may be hardwired or provided by “Config jumper” JP6. The choice may be soldered by 0R resistors.  This output can be used as alternative for OUT1, or for a second data channel, or in an independent linear control loop, such as a housing temperature stabilisation

## Indicators

2 colour LED (OUT3 and OUT4)	OUT3 and OUT4 can drive two colour LED placed under display adjacent to yellow LED. Can be used for gas alarm indication, or for status indication etc.
Status LED	Yellow LED is dedicated to indicate status of the sensor. Lights yellow at heating phase after power up and if status byte is not zero. See detailed description of status byte in <a href="#">“Error code and action plan (error code can be read via one of communication channels)”</a>
LCD	LCD is dedicated to represent measured values and status of the sensor. List of represented values and format are defined by particular model configuration.
NTC	This terminal is potential free and is connected to the upper pole of JP10

Table 2: Terminal descriptions for eSENSE

## Housing options

### WALL HOUSING (standard)

With or without display.

eSENSE: Dim.: 100 x 80 x 28mm  
(H x W x D)

Protection class: IP30

60mm hole separation for European standard J-boxes.

eSENSE II: Dim.: 130 x 85 x 30mm (H x W x D)

Protection class: IP30

Fits US standard J-boxes.

### INDUSTRIAL WALL HOUSING

With or without display

Dim.: 142 x 84 x 46mm (H x W x D)

Protection class: IP54

#### DUCT HOUSING

Protection class: IP65

Duct probe length: 245mm

(adjustable according to duct dimension)

### ALL-ROUND HOUSING

Dim.: 106 x 67 x 26mm (H x W x D)

Protection class: IP50

Connection: 34cm 3-wire pigtail (no OUT2)

For wall and duct applications.



Figure 1: Housing options


## Calibrations

The default eSENSE is maintenance free in normal environments thanks to the built-in self-correcting ABC algorithm (Automatic Baseline Correction). This algorithm constantly keeps track of the lowest reading of the sensor over a 7.5 days interval and slowly corrects for any long-term drift detected as compared to the expected fresh air value of 400 ppm CO<sub>2</sub>.

Rough handling and transportation might, however, result in a reduction of sensor reading accuracy. With time, the ABC function will tune the readings back to the correct numbers. The default “tuning speed” is limited to about 30 ppm/week. For post calibration convenience, in the event that one cannot wait for the ABC algorithm to cure any calibration offset, two switch inputs DigIn2 and DigIn3 are defined for the operator to select one out of two prepared calibration codes. If DigIn3 is shorted, for a minimum time of 8 seconds, the internal calibration code **bCAL** (background calibration) is executed, it is assumed that the sensor is operating in a fresh air environment (400 ppm CO<sub>2</sub>). If DigIn2 is shorted instead, for a minimum time of 8 seconds, the alternative operation code **CAL** (zero calibration) is executed, in which case the sensor must be purged by some gas mixture free from CO<sub>2</sub> (i.e. Nitrogen or Soda Lime CO<sub>2</sub> scrubbed air). If unsuccessful, please wait at least 10 seconds before repeating the procedure again. Make sure that the sensor environment is steady and calm!

Input Switch Terminal (normally open)	Default function (when closed for minimum 8 seconds)
Din3	<b>bCAL</b> (background calibration) assuming 400 ppm CO <sub>2</sub> sensor exposure
Din2	<b>CAL</b> (zero calibration) assuming 0 ppm CO <sub>2</sub> sensor exposure

Table 3: Switch input default configurations for eSENSE

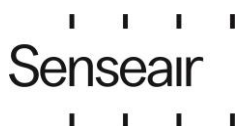

## Self-diagnostics

The system contains complete self-diagnostic procedures. A full system test is executed automatically every time the power is turned on. In addition, constantly during operation, the sensor probes are checked against failure by checking the valid dynamic measurement ranges. All EEPROM updates, initiated by the sensor itself, as well as by external connections, are checked by subsequent memory read back and data comparisons. These different system checks return error bytes to the system RAM. If this byte is not zero, the LED **Status** will be put into Low level state. The full error codes are available from the UART port or via I<sup>2</sup>C communication. *Offset regulation error* and *Out of range* are the only bits that are reset automatically after return to normal state. All other error bits have to be reset after return to normal by UART overwrite, or by power off/on.

LED	Default function
Status / Yellow	OFF = OK, Lit = Fault

Table 4: Default Logic output configured for eSENSE

## Maintenance

The eSENSE is basically maintenance free in normal environments thanks to the built-in self-correcting ABC algorithm. Discuss your application with Senseair in order to get advice for a proper calibration strategy.

When checking the sensor accuracy, PLEASE NOTE that the sensor accuracy is defined at continuous operation (three (3) ABC periods after installation)!

## Installations

The modules are factory calibrated and ready for use directly after power up. There are several alternative ways to connect the eSENSE to a host system (see also installation manual for the actual product):

**Note:** Do not use edge connector for connection to the host system without discussion with Senseair!

1. Using "UART connector" UART (Tx/D, Rx/D)
2. Using the 4 pins **main terminal**. Available signals are power supply (G+ and G0) and the buffered analogue outputs (OUT1, OUT2).

**Note:** The terminals are not protected against reverse voltages and current spikes! Proper ESD protection is required during handling, as well as by the host interface design.

## Default functions / configurations

### Outputs

The basic eSENSE configuration is a simple analogue output sensor transmitter signal directed to OUT1 and OUT2. Via the serial communication terminal, the CO<sub>2</sub> readings are available to an even higher precision, together with additional system information such as sensor status, analogue outputs, and other variables.

The user can modify the output ranges at any time using a dedicated development kit, including PC software and a special serial communication cable.

Terminals	Output	Correspondence
OUT1	0 – 10.0 V DC	0 – 2000 ppm CO <sub>2</sub> <sup>1</sup>
OUT2	2.0 – 10.0 V DC or 4.0 – 20.0 mA  0.9 – 1.6 V DC or 1.5 – 2.5 mA  0 V DC or 0 mA	0 – 2000 ppm CO <sub>2</sub> <sup>1</sup>  Status = ERROR  Status = NOT READY

Table 5: Default analogue output configuration for eSENSE

Note 1: eSENSE ext. range 10000 ppm: 0 – 10000 ppm

## Error codes and action plans

(Error code can be read via one of communication channels)

Bit #	Error code	Error description	Suggested action
0	1	Fatal error	Try to restart sensor by power OFF/ON. Contact local distributor.
1	2	Offset regulation error	Try to restart sensor by power OFF/ON. Contact local distributor.
2	4	Algorithm error. Indicate wrong EEPROM configuration.	Try to restart sensor by power OFF/ON. Check detailed settings and configuration with software tools. Contact local distributor.
3	8	Output error Detected errors during output signals calculation and generation.	Check connections and loads of outputs. Check detailed status of outputs with software tools.
4	16	Self-diagnostic error. May indicate the need of zero calibration or sensor replacement.	Check detailed self-diagnostic status with software tools. Contact local distributor.
5	32	Out of range error Accompanies most of other errors. Can also indicate overload or failures of sensors and inputs.  Resets automatically after source of error disappearance.	Check connections of temperature and relative humidity probe (if mounted). Try sensor in fresh air. Perform CO <sub>2</sub> background calibration. Check detailed status of measurements with software tools. <i>See Note 1!</i>
6	64	Memory error Error during memory operations.	Check detailed settings and configuration with software tools.
7	128	Reserved	

Table 6: Key Error code and action plan for the eSENSE

Note 1: Any probe is out of range. It occurs, for instance, during over-exposure of CO<sub>2</sub> sensor, in which case the error code will automatically reset when the measurement values return to normal. It could also indicate the need of zero point calibration. If the CO<sub>2</sub> readings are normal, and still the error code remains, the temperature sensor can be defect or the connections to it are broken.

**Remark:** If several errors are detected at the same time the different error code numbers will be added together into one single error code!



## IMPORTANT NOTICE

1. Senseair reserves the right to make changes to the information contained in this document without notice. When you consider any use or application of Senseair product stipulated in this document ("Product"), please make inquiries the sales office of Senseair or authorised distributors as to current status of the Products.
2. All information included in this document are provided only to illustrate the operation and application examples of Senseair Products. Senseair neither makes warranties or representations with respect to the accuracy or completeness of the information contained in this document nor grants any license to any intellectual property rights or any other rights of Senseair or any third party with respect to the information in this document. You are fully responsible for use of such information contained in this document in your product design or applications. Senseair ASSUMES NO LIABILITY FOR ANY LOSSES INCURRED BY YOU OR THIRD PARTIES ARISING FROM THE USE OF SUCH INFORMATION IN YOUR PRODUCT DESIGN OR APPLICATIONS.
3. The Product is neither intended nor warranted for use in equipment or systems that require extraordinarily high levels of quality and/or reliability and/or a malfunction or failure of which may cause loss of human life, bodily injury, serious property damage or serious public impact, including but not limited to, equipment used in nuclear facilities, equipment used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and equipment used in finance-related fields. Do not use Product for the above use unless specifically agreed by Senseair in writing.
4. Though Senseair works continually to improve the Product's quality and reliability, you are responsible for complying with safety standards and for providing adequate designs and safeguards for your hardware, software and systems which minimise risk and avoid situations in which a malfunction or failure of the Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption.
5. Do not use or otherwise make available the Product or related technology or any information contained in this document for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). When exporting the Products or related technology or any information contained in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. The Products and related technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Please contact Senseair sales representative for details as to environmental matters such as the RoHS compatibility of the Product. Please use the Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Senseair assumes no liability for damages or losses occurring as a result of noncompliance with applicable laws and regulations.
7. Resale of the Product with provisions different from the statement and/or technical features set forth in this document shall immediately void any warranty granted by Senseair for the Product and shall not create or extend in any manner whatsoever, any liability of Senseair.
8. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Senseair.

[www.senseair.com](http://www.senseair.com)

