



SENSEAIR SUNRISE DT

CO₂ sensing in permanently occupied environments

Engineered for demanding 24/7 applications, Senseair Sunrise DT combines a robust optical white-cell architecture with integrated dual-technology to eliminate the need for calibration in permanently occupied environments.

The optical design ensures that any drift or aging effects are automatically compensated. Meanwhile, the integrated dual technology continuously adapts to component aging throughout the sensor's lifetime.

Product overview *

| | |
|----------------------|--------------------------------|
| Article number | 006-0-0020 |
| Operating principle | Non-dispersive infrared (NDIR) |
| Measured gas | CO ₂ |
| Measurement range | 0–10 000 ppm |
| Accuracy | ±(30 ppm + 3 % of reading) |
| Operating conditions | 0–50 °C 0–85 %RH |
| Power supply | 3.05–5.5 V |
| Average current | 1–34 µA |
| Communication | UART, I ² C |
| Maintenance | Maintenance free |
| Life expectancy | > 10 years |
| Dimensions | 34 x 21 x 12 mm |

* Preliminary specifications. May be changed without notice.

Key benefits

- No ABC/ASC or field calibration required
- Dual Technology, integrated
- Very low power consumption
- True NDIR high precision sensor
- Proven design in the field
- Compliant with building standards:
 - ANSI/ASHRAE Standard 62.1-2025
 - RESET grade A
 - WELL Building Standard® (WELL v2™)
 - Title 24 of the California Building Code

Applications

- Indoor air quality monitoring
- Demand-controlled ventilation (DCV)
- 24/7 occupied environment e.g.
 - Hospitals
 - Nursing homes
 - Control rooms

1. Sensor performance

1.1. Sensing performance

| Parameter | Conditions | Value |
|---------------------------|-----------------------|---|
| Target gas | - | Carbon dioxide (CO ₂) |
| Operating principle | - | Non-dispersive infrared (NDIR) |
| Gas sampling method | - | Diffusion |
| Measurement range | Standard | 0–3000 ppm |
| | Extended | 3001–10 000 ppm |
| Accuracy ^{1,2,3} | 0 ppm – 3000 ppm | ±(30 ppm + 3 % of reading) |
| | 3001 ppm – 10 000 ppm | ±10 % of reading |
| Output resolution | - | 1 ppm |
| Measurement interval | Default | 16 s; Configurable |
| Sampling | Default | 8 samples; Configurable 1 to 1024 |
| Response time | T _{63%} | 21 s |
| Compensation ⁴ | Temperature | On-board sensor element |
| | Pressure | Pressure value must be provided by host system. Otherwise, dependency is 1.6 % reading per kPa deviation from normal pressure |

1. The accuracy for the complete operating conditions is specified in chapter 4.2. Specification is referenced to uncertainty of calibration gas mixtures ±1 %. Sensor is calibrated to meet product specifications within standard range 15–35 °C.
2. Shipping, rough handling and assembly can temporarily affect the accuracy of the sensor. Accuracy can be fully restored by zero or target calibration.
3. Senseair Sunrise complies with ANSI/ASHRAE Standard 62.1-2025, concentrations 600, 1000, and 2500 ppm measured at sea level at 25 °C.
4. CO₂ readings are temperature compensated. Optional host system can provide an ambient pressure value for pressure compensated CO₂ readings. The Sunrise does not have an integrated pressure sensor.

1.2. General performance

| Parameter | Conditions | Value |
|------------------------------------|----------------|--------------------------------|
| Operating temperature ¹ | | 0–50 °C |
| Operating humidity | Non-condensing | 0–85 %RH |
| Power supply | | 3.05–5.5 V |
| Peak current ² | | < 125 mA |
| Average Current ³ | | ≥ 1 µA, default settings 34 µA |
| Dimensions | (L x W x H) | 34 x 21 x 12 mm |
| Life expectancy | | > 10 years |
| Storage temperature | | -40–70 °C |
| Weight | | 5 g |
| Communication interface | | UART / I ² C |
| Maintenance | | Maintenance-free |

1. Sensor is calibrated to meet product specifications within standard range 15–35 °C, extended range 0–50 °C. Sensor can survive temperatures outside of operating range, but measurement accuracy is not guaranteed.
2. At sampling start/stop there is a fast transient current. See "Customer Integration Guideline Senseair Sunrise and Sunlight CO₂" (TDE7318) for details.
To guarantee the functionality of the sensor, the voltage supply must be kept, and the maximum current must be considered.
3. The average current consumption depends on configured measurement period and number of samples per measurement, see chapter 4.3 for further information's and dependency between configuration and average current consumption.

2. Pin configuration and functions

| Pin # | Symbol | I/O Type | Description |
|-------|-----------|----------|---|
| 1 | GND | Power | Ground |
| 2 | VBB | Power | Supply voltage |
| 3 | VDDIO | Power | I/O supply voltage for TxD/SCL and nRDY |
| 4 | RxD / SDA | I/O | UART receive input / I ² C bidirectional serial data. True open drain when operating as output. |
| 5 | TxD / SCL | I/O | UART transmit output / I ² C clock input. True open drain when operating as output. 100kΩ internal pull-up to VDDIO |
| 6 | COMSEL | Input | Communication select – Valid at power-up. High = UART (Internal pull-up, can be left floating) Low = I ² C (Connect to GND) |
| 7 | nRDY | Output | Measurement ready output. True open drain, active low, 1 MΩ internal pull-up to VDDIO |
| 8 | DVCC | Power | Internal supply voltage output. Not intended to supply external system. Leave floating if not used. |
| 9 | EN | Input | Enable sensor (active high). Drive this pin >1.2 V to turn on the sensor. Drive this pin <0.4 V to shut down the sensor. Do not leave floating. Connect to VBB if not used. |

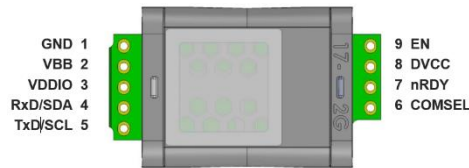


Figure 1. Pin configuration of Senseair Sunrise DT

3. Drawing - Dimensions – Handling

Dimensional drawing of sensor with dimensions and their tolerances in millimetres. Note that the black particle filter on top of the sensor must not be removed or modified to ensure specified sensor performance over the sensor's lifetime.

Additional information about the integration and handling can be found in the *"Senseair Sunrise and Sunlight Handling Manual"* (ANO4947) at the Senseair webpage.

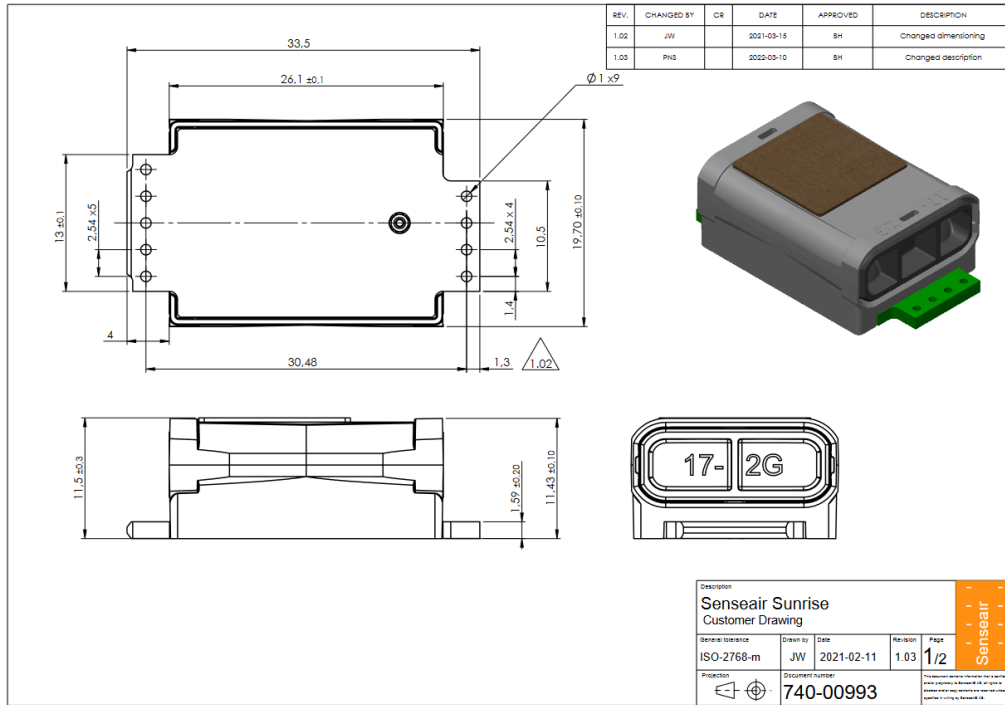


Figure 2. Dimensions of Senseair Sunrise DT

4. Specifications

4.1. Recommended operating conditions

Over operating temperature range, unless otherwise noted.

4.1.1. Operating conditions for voltage

| Symbol | Description | Min | Typ | Max | Unit | Test conditions |
|---------|--|------|-----|-------|------|-----------------|
| VBB | Supply voltage | 3.05 | 3.3 | 5.5 | V | |
| VDDIO | I/O supply voltage TxD/SCL and nRDY | - | - | 5.5 | V | |
| COMSEL | Communication select | - | - | DVCC | V | |
| EN | Enable | - | - | VBB | V | |
| RxD/SDA | UART / I ² C | - | - | VDDIO | V | |
| TxD/SCL | UART / I ² C | - | - | VDDIO | V | |

4.1.2. Operating conditions for current

| Symbol | Description | Min | Typ | Max | Unit | Test conditions |
|----------------------------------|-------------------------|-----|-----|-----|------|---|
| I _{COMSEL} ¹ | DC injection current | -2 | - | 2 | mA | (V _{IN} <GND, V _{IN} >DVCC) |
| I _{DVCC} ^{1,2} | Internal supply current | 0 | - | 25 | mA | |

- Limited to the value specified
- Leave floating if unused

4.2. Sensor accuracy over the nominal operating range

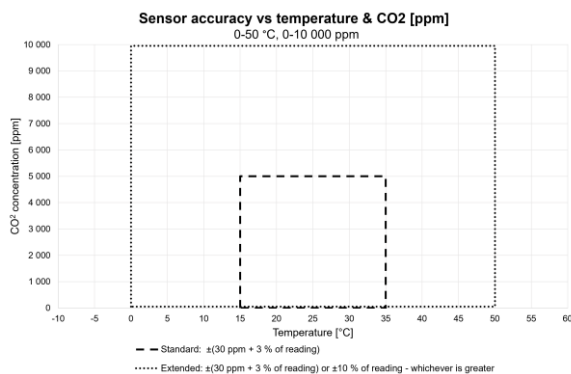


Figure 3: Accuracy over temperature and CO₂

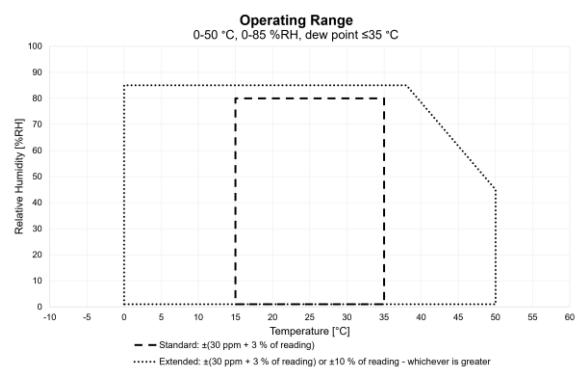


Figure 4: Operating range

4.3. Average current consumption depending on sensor configuration

4.3.1. Average current consumption at different measurement intervals

| Measurement period [s] | 2 samples | | 8 samples | | 32 samples | |
|------------------------|------------|--------|--------------------|--------|------------|--------|
| | Continuous | Single | Continuous | Single | Continuous | Single |
| 16 | 22 μA | - | 34 μA ¹ | - | - | - |
| 60 | 18 μA | 7 μA | 21 μA | 17 μA | 35 μA | 27 μA |
| 300 | 16 μA | 1 μA | 17 μA | 3 μA | 20 μA | 5 μA |

- Default setting.

5. Sensor documentation

5.1. Measurement mode

The Senseair Sunrise supports two modes of operation:

1. Continuous measurement mode
2. Single measurement mode

The **default** operation mode for Senseair Sunrise is **Continuous measurement mode**.

1) In Continuous measurement mode, the sensor measures at regular intervals (measurement period, default setting 16 s). The host can read measurement data after each measurement and does not need to send any command to trigger measurements.

2) In Single measurement mode, the sensor waits for the hosts command to measure. The host needs to send a command sequence to trigger each measurement. By using this function, the current consumption can be further optimized and gives more flexibility how often the sensor should start a measurement without changing basic settings of the sensor.

See *"Customer Integration Guidelines Senseair Sunrise and Sunlight CO₂" (TDE7318)* for details.

5.2. Communication

Refer to *"Modbus on Senseair Sunrise and Sunlight" (TDE5514)* and *"I2C on Senseair Sunrise and Sunlight" (TDE5531)*. Follow the *"Customer Integration Guidelines Senseair Sunrise and Sunlight CO₂" (TDE7318)* for additional instructions.

5.3. Maintenance

No maintenance is required for Senseair Sunrise DT.

5.4. User- and integration-guide

Further and detailed information for the use and integration of the sensor are described in *"Customer Integration Guidelines Senseair Sunrise and Sunlight CO₂" (TDE7318)* which can be download from the Senseair webpage.

5.5. Handling

Additional information about the handling can be found in the *"Senseair Sunrise and Sunlight Handling Manual" (ANO4947)* which can be download from the Senseair webpage.

6. Revision History

| Date | Version | Page(s) | Changes |
|----------|---------|---------|------------------------------------|
| May 2026 | 1 | 1 | Initial release of Marketing page. |
| | | | |

IMPORTANT NOTICES

1. Senseair reserves the right to make changes to the information contained in this document without notice. When you consider any use or application of Senseair product stipulated in this document ("Product"), please make inquiries the sales office of Senseair or authorised distributors as to current status of the Products.
2. All information included in this document are provided only to illustrate the operation and application examples of Senseair Products. Senseair neither makes warranties or representations with respect to the accuracy or completeness of the information contained in this document nor grants any license to any intellectual property rights or any other rights of Senseair or any third party with respect to the information in this document. You are fully responsible for use of such information contained in this document in your product design or applications. Senseair ASSUMES NO LIABILITY FOR ANY LOSSES INCURRED BY YOU OR THIRD PARTIES ARISING FROM THE USE OF SUCH INFORMATION IN YOUR PRODUCT DESIGN OR APPLICATIONS.
3. The Product is neither intended nor warranted for use in equipment or systems that require extraordinarily high levels of quality and/or reliability and/or a malfunction or failure of which may cause loss of human life, bodily injury, serious property damage or serious public impact, including but not limited to, equipment used in nuclear facilities, equipment used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signalling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and equipment used in finance-related fields. Do not use Product for the above use unless specifically agreed by Senseair in writing.
4. Though Senseair works continually to improve the Product's quality and reliability, you are responsible for complying with safety standards and for providing adequate designs and safeguards for your hardware, software and systems which minimise risk and avoid situations in which a malfunction or failure of the Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption.
5. Do not use or otherwise make available the Product or related technology or any information contained in this document for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). When exporting the Products or related technology or any information contained in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations. The Products and related technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
6. Please contact Senseair sales representative for details as to environmental matters such as the RoHS compatibility of the Product. Please use the Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Senseair assumes no liability for damages or losses occurring as a result of noncompliance with applicable laws and regulations.
7. Resale of the Product with provisions different from the statement and/or technical features set forth in this document shall immediately void any warranty granted by Senseair for the Product and shall not create or extend in any manner whatsoever, any liability of Senseair.
8. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written consent of Senseair.